INSTRUCTION MANUAL

MODEL 8243

Printer Adapter and Cable

Read this manual in order to use these instruments properly.


Keep this document in a safe place for future reference.




■Precautions before Use

- The adapter and cable are dedicated for KYORITSU digital multimeters (DMM) and cannot be used with other products.
- To ensure safety, turn off the DMM and printer, remove the test leads from the DMM, and then connect the adapter and cable to the DMM and printer.
- Follow the precautions in the instruction manual for both the DMM and printer.

■Dimensional drawing

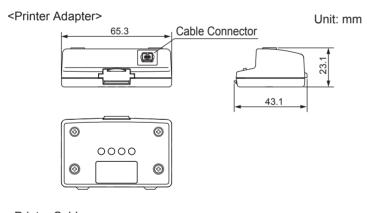


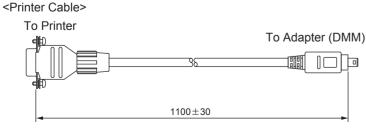


■Connection

Remove the Blank cover on the back of the DMM to attach the adapter.



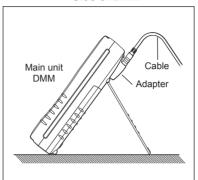

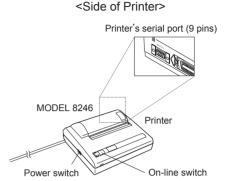

Infrared (IR) Adapter and Printer cable

■Output to Printer

Printer settings

Input: serial Baud rate: 9600 bps

Note: For detailed settings, refer to the instruction manual of the printer.

Printing real-time measured value

The measured value on the display can be printed.

<Printing Separately>

- 1) Press the MEMORY key of the DMM. The "MEM" symbol appears on the display.
- 2) Press the PRINT (SELECT) Kev.
- 3) The data is printed everytime the PRINT (SELECT) Kev is pressed.

<Consecutive printing>

- 1) Press the MEMORY key of the DMM. The "MEM" symbol appears on the display.
- 2) Keep the PRINT (SELECT) key depressed for at least one second. The data is printed at the specified time intervals.
- 3) To cancel printing, keep the MEMORY key depressed for at least one second. The "MEM" symbol disappears on the display.
- Printing data in manual-mode (SAVE) memory
 - 1) Press the MEMORY key of the DMM. The "MEM" symbol appears on the display.
 - 2) Press the PRINT (SELECT) key.
 - 3) Press the SAVE (HOLD) key.

All the data in manual-mode (SAVE) memory are printed, then the "MEM" symbol disappears from the display.

- Printing data in logging-mode memory
 - 1) Press the MEMORY key of the DMM. The "MEM" symbol appears on the display.
 - 2) Press the PRINT (SELECT) key.
 - 3) Press the LOG (MIN/MAX) key.

All the data in logging-mode memory are printed. Then the "MEM" symbol disappears on the display.

8-08 92-1984