



DIGITAL INSULATION/CONTINUITY TESTERS KEW 3021A/3022A/3023A



KEW 3021A/3022A/3023A Specifications


		3021A				3022A				3023A				
Insulation resistance														
Test vol	ltage	125V	250V	500V	1000V	50V	100V	250V	500V	100V	250V	500V	1000V	
Measuri	Measuring range		4.000/4)/40.00/400.0/2000MΩ		4.000/	40.00/	4.000/	/40.00/	4.000/40.00/		4.000/40.00/		
(Auto ra	ange)	200.0ΜΩ 4.000/4				200.0ΜΩ		400.0/2000ΜΩ		200.0ΜΩ	0.0ΜΩ 400.0/2000ΜΩ		ם ב	
First Effe Measuri	fective ring range	0.2 - 20ΜΩ	0.2 - 40ΜΩ 0.2 - 200Ν		0.2 - 1000ΜΩ	0.2 - 20ΜΩ		0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 20ΜΩ	0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 1000ΜΩ	
Mid-sca	Mid-scale value		5ΜΩ		50ΜΩ		5ΜΩ		50ΜΩ		5ΜΩ		50ΜΩ	
Accurac	су	±2%rdg±6dgt				±2%rdg±6dgt				±2%rdg±6dgt				
Second effective						0.110 - 0.199ΜΩ								
		20.01 -	40.01 -	200.1 -	1001 -	20.01 - 200.0ΜΩ		40.1 -	200.1 -	20.01 -	40.01 -	200.1 -	1001 -	
IIICasuii	suring range	200.0ΜΩ	2000ΜΩ	2000ΜΩ	2000ΜΩ			2000ΜΩ	2000ΜΩ	200.0ΜΩ	2000ΜΩ	2000ΜΩ	2000ΜΩ	
Accurac	су		±5%rd	g±6dgt		±5%rdg±6dgt				±5%rdg±6dgt				
Rated c	current	DC1.0 - 1.2mA												
Short ci	Short circuit current DC1.5mA MAX													
Ω/Continuity														
Auto rar	-		40.00/400.0 Ω											
Accurac	,	±2%rdg±8dgt												
	Voltage on	5V±20%												
open cir		cuit Cuit												
	Short circuit current DC220±20mA													
	Fuse Quick acting ceramic fuse 0.5A/600V (\$\phi\$6.35 \times 32mm)													
Voltage measurement														
Range		AC 20-600V(50/60Hz) DC ±20-600V												
Accurac	Accuracy													
Other funct	Other function						•		Bar graph display		,		Comparator	
			Live circuit warning		Auto power off		alarm	 Backlight 		Safety lock		Remote measurement		
General														
	standard													
	sions / Weight													
Power source R6/LR6(AA)(1.5V) × 6							==							
Accesso		7150A (Test lead with remote control switch set), 8923 (Fuse 0.5A/600V), 9121 (Shoulder strap), R6 (AA) × 6, Instruction Manual												
Optiona	Optional 7115 (Extension Probe), 8016 (Hook type prod), 9089 (Carrying case)													

Comparator Function

Select and set the standard resistance value in each measuring range, and compare it with readings.

Notice the result of comparison by the FAIL or PASS sign on the display, and by buzzer sound in same time.

Buzzer can be set either for FAIL or PASS at your choice.

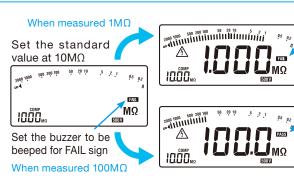

Accessories 7150A[Test lead with remote control swich set]







FAIL sign with

buzzer sound

sign indicated

PASS



Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquires or orders:



KYORITSU ELECTRICAL **INSTRUMENTS** WORKS, LTD.

2-5-20, Nakane, Meguro-ku, Tokyo, 152-0031 Japan Phone:+81-3-3723-0131 Fax:+81-3-3723-0152 E-mail:info-eng@kew-ltd.co.jp

www.kew-ltd.co.jp