

PC42t Plus(Honeywell) printer settings

Press and hold down  button to power on the tester.



A long press (at least 1 sec.) of  button



The currently set date and time are displayed.



Press  button.

(Pressing of  button works as the same.)



The currently selected printer is displayed. The displayed printer starts blinking by pressing  button.



Select the "PC42" printer by pressing

 or  button.

*** Printer setting blinks while selecting a printer.**



Select "PC42" and press  button. Now printer setting completes.

Label printer compatible with KEW 6205 Portable Appliance Tester

Paper setting for PC42t Plus(Honeywell)

Preparation:


Install the "Printer driver" and "Printer setting tool" on your PC via the CD supplied with the printer.

Use 40mm(W)×100mm(H) vertical printing type label.


1. Power on the printer and connect with your PC with a USB cable.
2. Run "PrintSet 5" from the Start menu.




3. Click  icon.

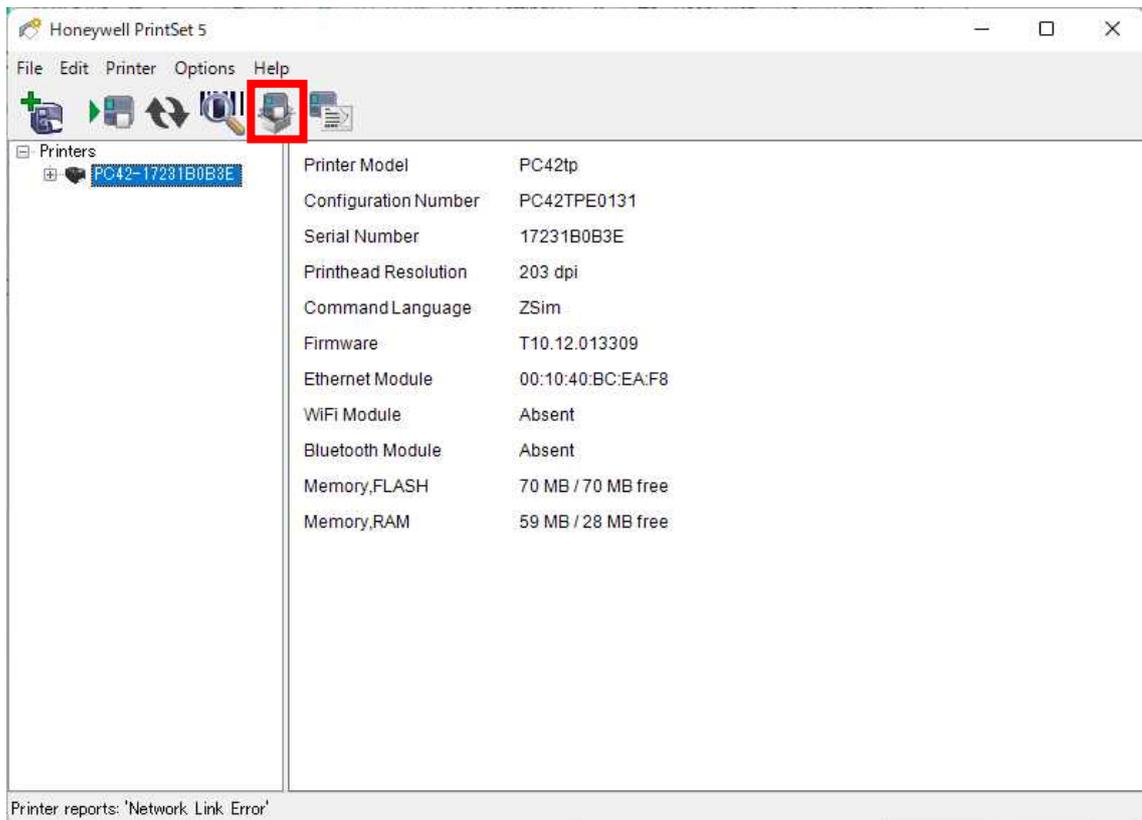


4. Click "Next".

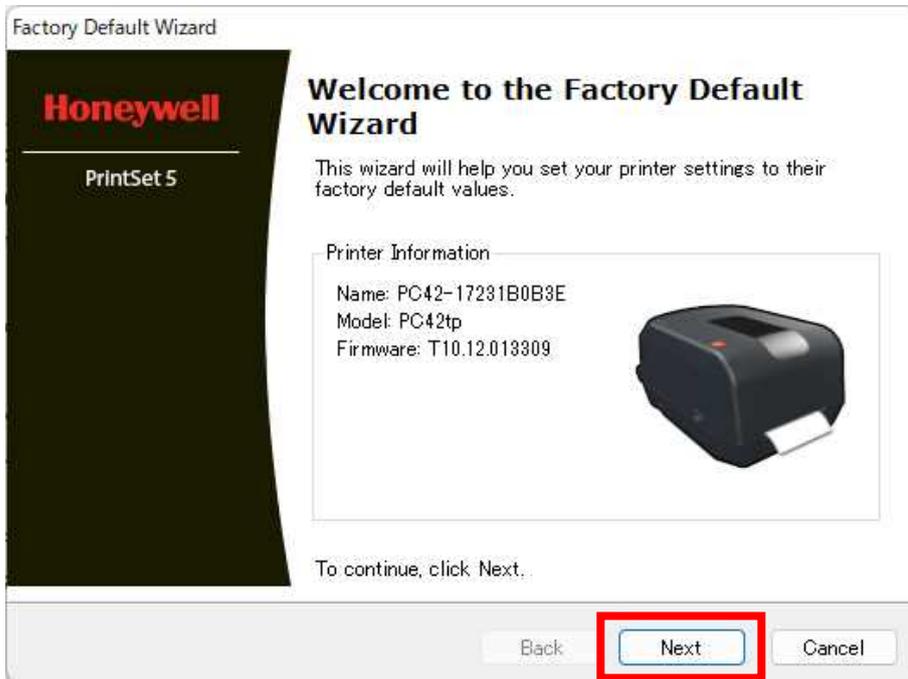


5. Select "Other Configuration", and then click "Next".

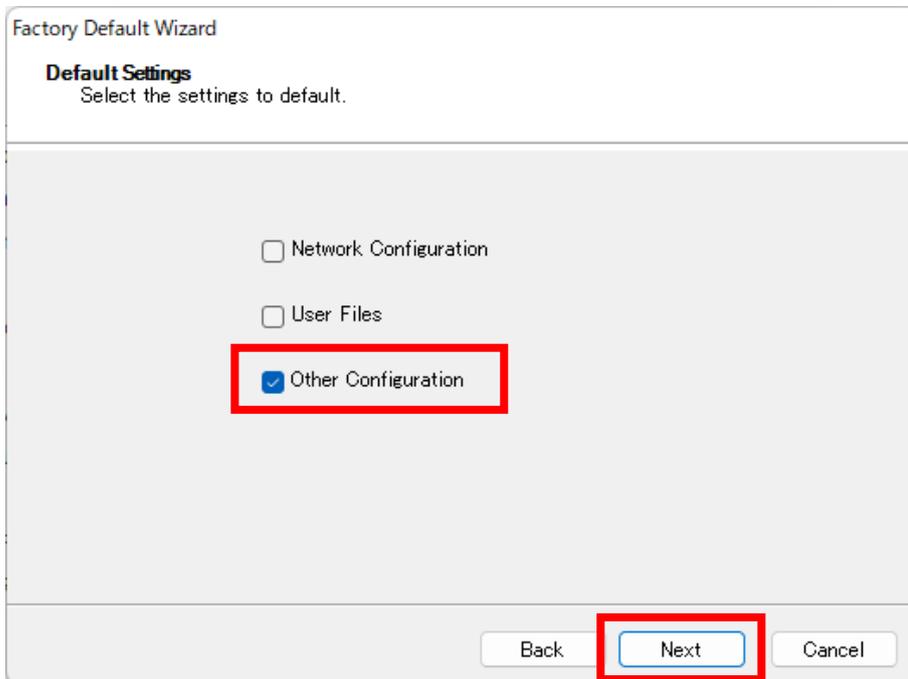

6. Click "Yes".

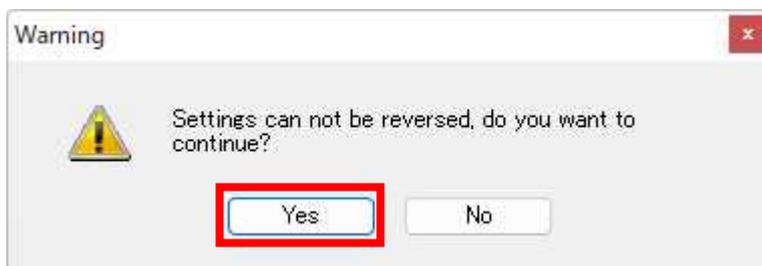

7. Click "Next".

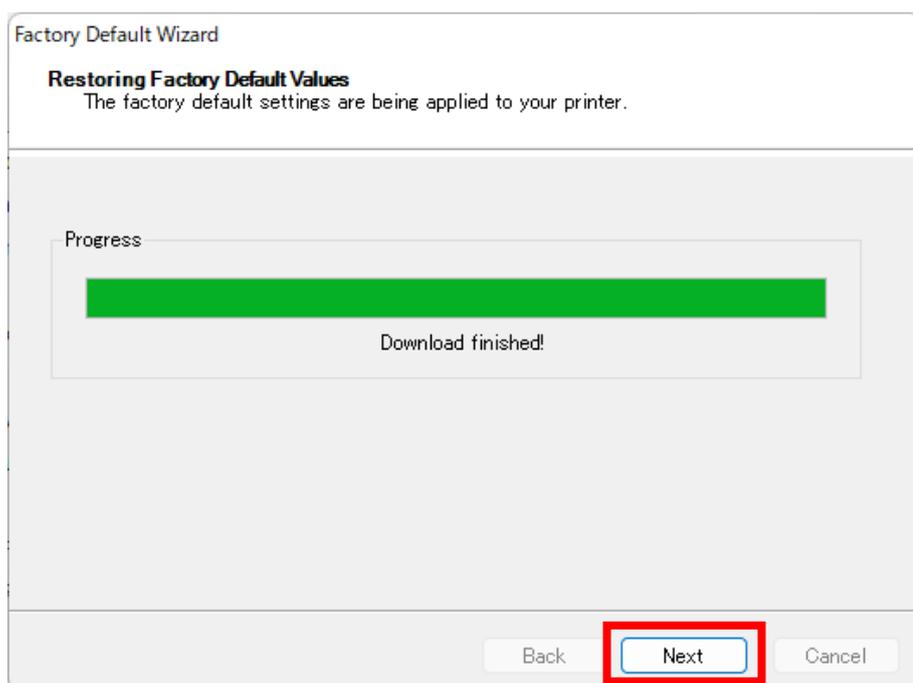


8. Click "Finish" to complete initialization.



9. Change the settings of items ① to ⑦ as described in the table below, and then click "Save".

	Item	Setting value
①	Baud Rate	9600
②	Hardware	Enable
③	Media Width (dots)	350
④	Media Length (dots)	750
⑤	Power Up Action	No Action
⑥	Head Down Action	No Action
⑦	Command Language	ZSim

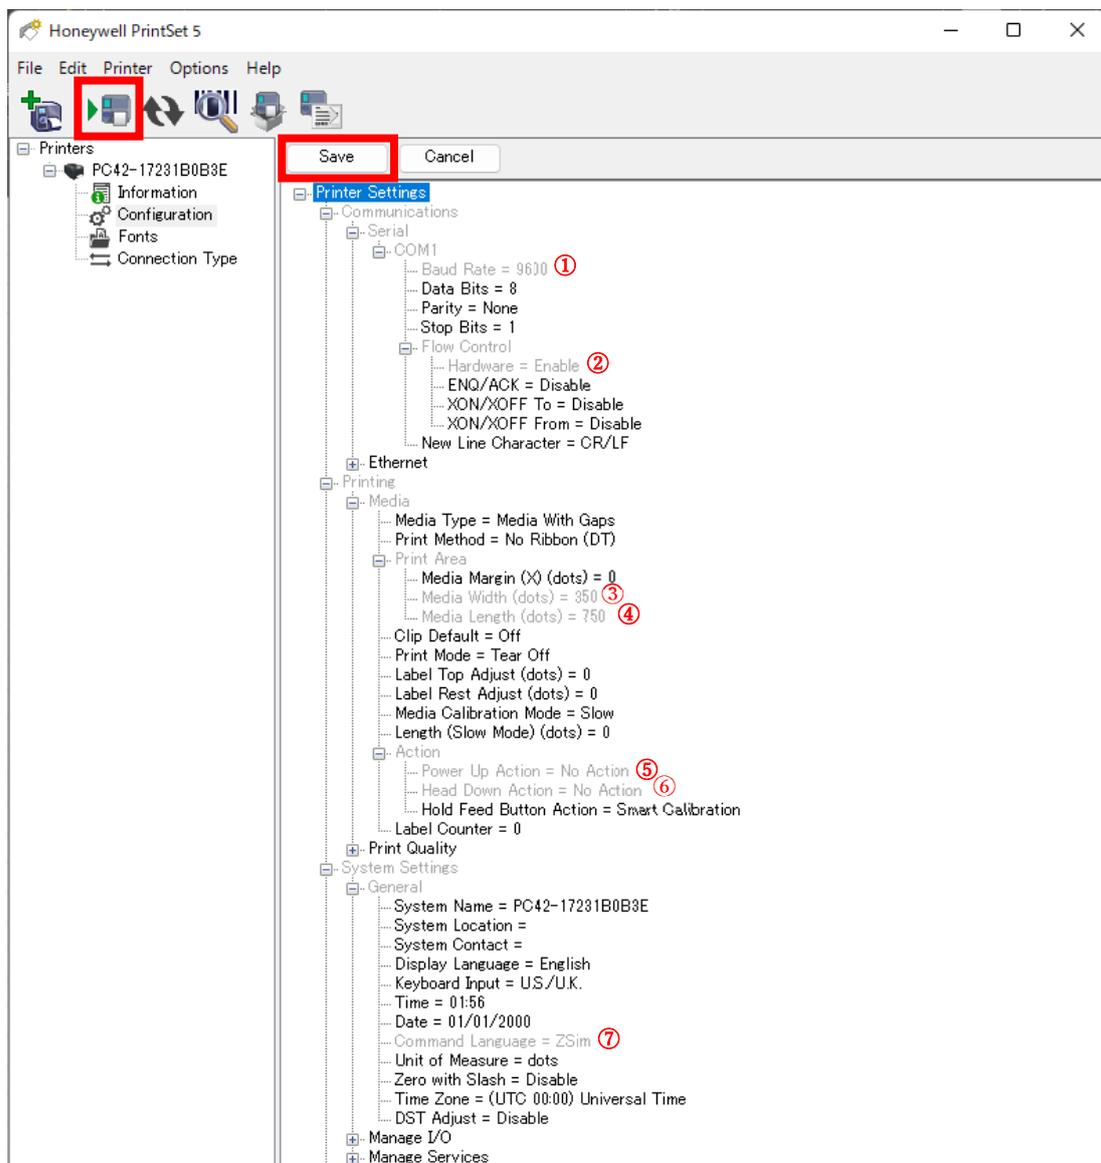

10. Click  icon to complete settings.