


INSTRUCTION MANUAL

MAGNET HANGER STRAP

MODEL 9189

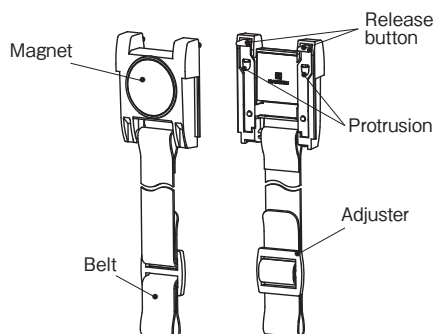

Magnet hanger strap MODEL9189 is supplied as an optional item for our digital multi-meter KEW1020R and KEW1021R.

⚠ DANGER

- This magnet may affect safe and proper operation of medical devices. Stay away from or do not use this magnet strap if you have pacemaker or other electronic medical devices.

⚠ CAUTION

- Read through and follow the operating instructions and precautions described in the instruction manual for each digital multi-meter.
- Always keep magnetic cards, PCs and displays away from the magnet.
- Care should be taken so as not to short-circuit the object under test with the metal part of the backside of the magnet head part.

How to use


1. Detach the Flat-type or Wing-type holder from the instrument.



2. Attach the Hanger strap to the instrument. Then you can put the magnet on any metal surface and hang the instrument.




3. Hanging the instrument with the belt is also possible by storing the magnet head part on the backside of the instrument.

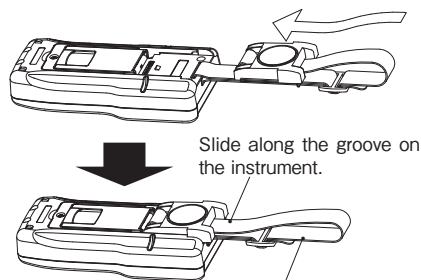


Adjust the adjuster to alter the belt length.

Do not set the adjuster too close to the magnet head part. Otherwise, the strap cannot be attached to the instrument.

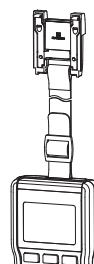


Hanging with magnet

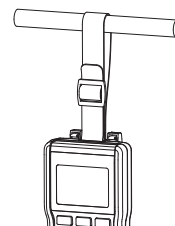

Hanging with belt

4. To detach the strap from the instrument, press the release buttons and pull out the magnet head part.

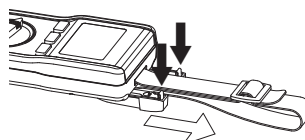

**KYORITSU ELECTRICAL
INSTRUMENTS
WORKS, LTD.**

2-5-20, Nakane, Meguro-ku,
Tokyo, 152-0031 Japan