KEW Report Installation Manual





This manual contains instructions how to install the special software "KEW Report" supplied with MODEL8263, MODEL8212USB and 8212-RS232C.

1. Introduction

Interface

This instrument is equipped with a USB interface. Communication method: USB Ver1.1

The internal data of the instrument can be transferred to a PC via USB communication.

System Requirements

- OS (Operation System) For the supported OS, check the label on the CD case or visit our website. Display
- 1024×768 dots, 65536 colors or more
- HDD (Hard-disk space required) 100 Mbyte or more

■Trademark

· Windows® is a registered trademark of Microsoft in the United States

The latest software is available for download from our website. www.kew-ltd.co.ir




2. Installation of "KEW Report"

- (1) Always check the followings before installing "KEW Report"
- · To prepare your system for installation, please close all open programs.
- · Be sure NOT to connect the instrument to a PC until the installation completes.
- · Installation shall be done with Administrator right.
- (2) Insert the supplied CD-ROM containing "KEW Report" in your PC's CD-ROM drive. Then the following pop-up will appear at the upper right on the screen. Left-click on this box.




(3) Click Run install.exe when the box as shown below

If User Account Control dialog box appears, click Yes

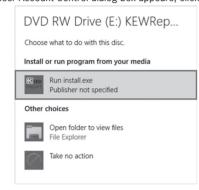


If neither (2) nor (3) appears, click the CD icon and run "install.exe" file.

(4) Read through and understand the License Agreement and click "I accept....", and then click Next.

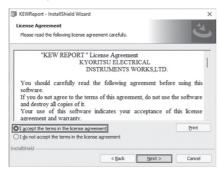

- (5) Confirm the information on installation, and then click **Install** to start installation
- (6) Click Finish when "InstallShield Wizard Complete" dialog box appears. When the installation wizard completes, subsequent installation begins automatically. Please refer to 3. USB driver installation.

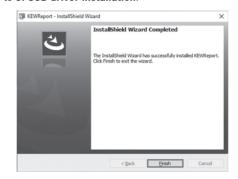

How to un-install "KEW Report": Open the Control panel, click Programs and Features and select "KEW Report"

3. USB Driver Installation

(1) When KEW Report has been successfully installed in your computer, the following dialog box appears to start installing the USB driver.

Click Next



(2) Read through and understand the End User License Agreement and click "I accept....", and then click Next.




(3) If the following Security Warning message appears, click Install



(4) Installation completes when the following window appears. Click Finish

KEW USB Serial Port Driver Ver.2.03 installe

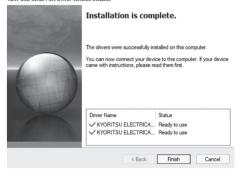

The USB driver has been successfully installed.

To restart the interrupted USB driver installation process, right click on the CD drive and click Open. Click and start "kewusbserial200 setup.exe" in the DRIVER folder.

How to un-install the USB driver:


Open the Control panel, click Programs and Features and select "Windows Driver Package - KYORITSU **ELECTRICAL INSTRUMENTS WORKS, LTD. KYORITSU** USB Driver Package-Bus"

4. Checking COM Port No.

(1) Right-click **Start** button and then **Device Manager**.




(2) Click Ports (COM & LPT) to see the COM port number assigned for the instrument.

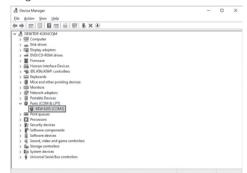


(3) If the assigned number is out of COM1 to COM32, follow the instructions described in 5. Changing COM Port No. and change the number accordingly.

5. Changing COM Port No.


- (1) Follow the procedures described in 4. Checking COM Port No. and perform steps (1) to (3).
- (2) After performing step (3), select the displayed instrument name (COMx) and click Properties.

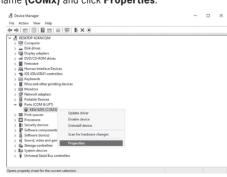

(3) Click Port Settings tab, and then click Advanced....

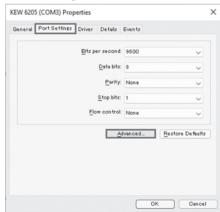

(4) Click and select a number (from COM1 to COM32) on the COM Port Number: box, and then click OK.

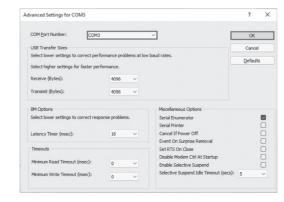

6. Starting KEW Report

Start "KEW Report" by; 1) clicking the icon for "KEW Report" on your desktop, or 2) clicking Start -> Program -> KEW -> KEW Report.


(1) COM Port setting

Click Communication -> COM Port on the Main Window of "KEW Report", and select the pre-set COM Port number.



(2) Download

Click Communication -> Download on the Main Window of "KEW Report". Then the following window appears. Click Exit or "x" box at the upper right of the window to close the program.

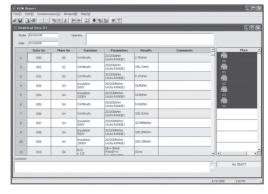

Further detailed information is given in the HELP.



KYORITSU ELECTRICAL **INSTRUMENTS** WORKS, LTD.

2-5-20.Nakane. Meguro-ku. Tokyo, 152-0031 Japan Phone: +81-3-3723-0131 Fax: +81-3-3723-0152 Factory: Ehime, Japan

www.kew-ltd.co.jp

7-22 92-2340C