



## **How to reinstall USB device driver**

Please follow the procedure below and delete the existing USB driver. Then install it again.


- 1) Connect a PC and Power Meter 6300 with a USB cable.
- 2) Click “Control Panel” in the Start menu at the lower left on the Windows XP screen.
- 3) Click “System”.

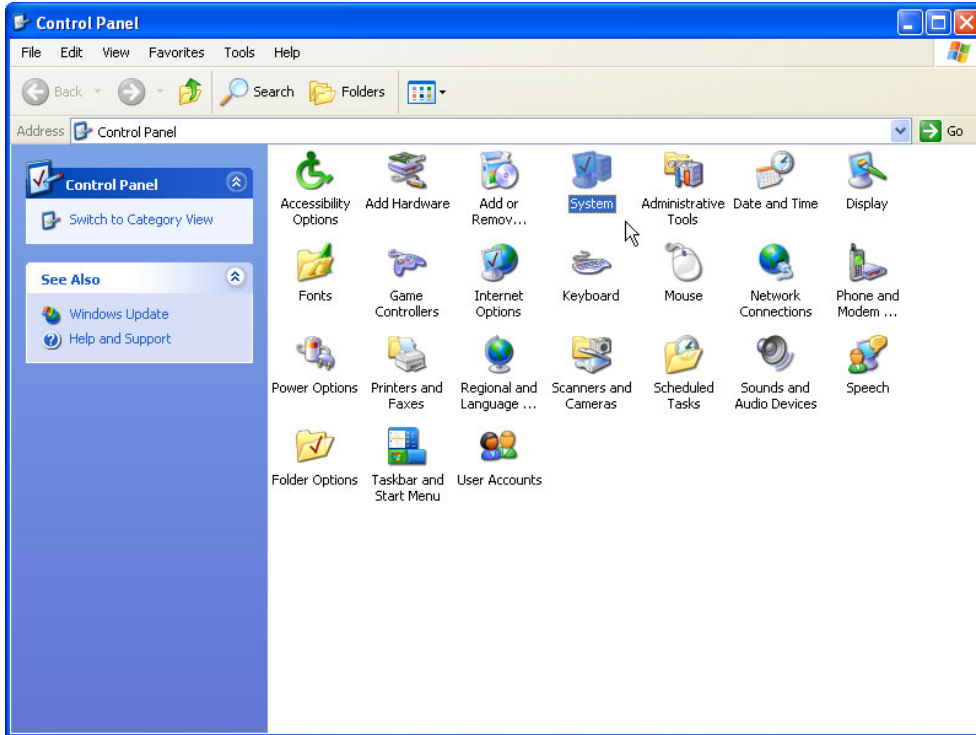

When following window appears, please click “Switch to Classic View”.

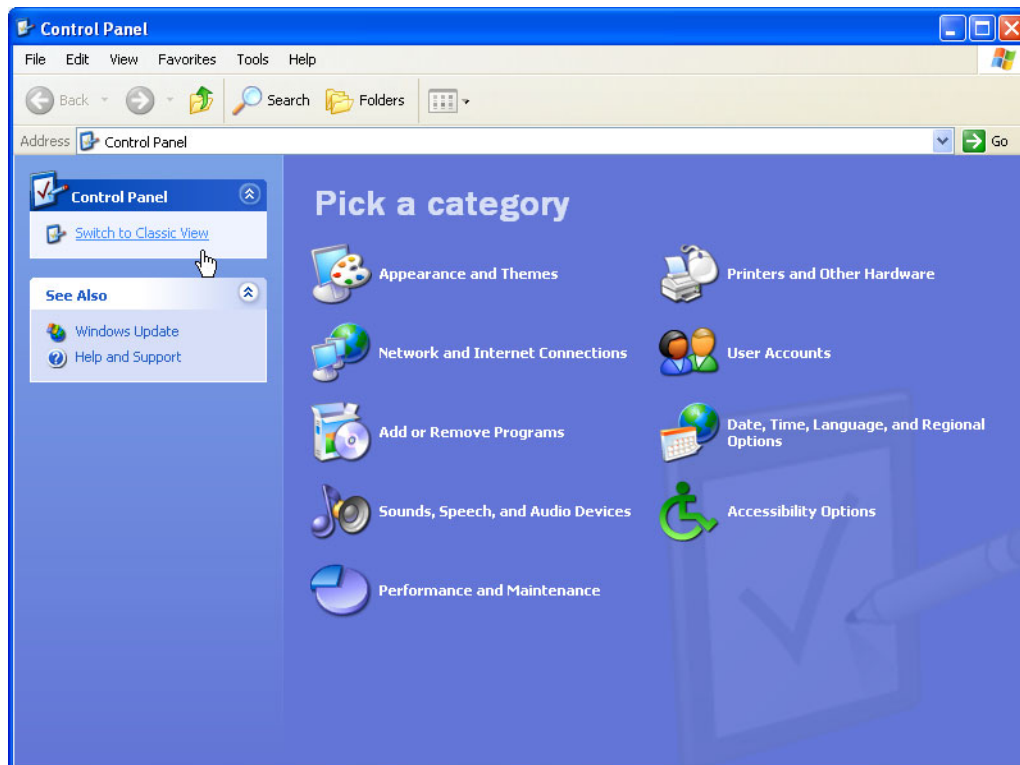


1) Click “Device Manager” in the “Hardware”.

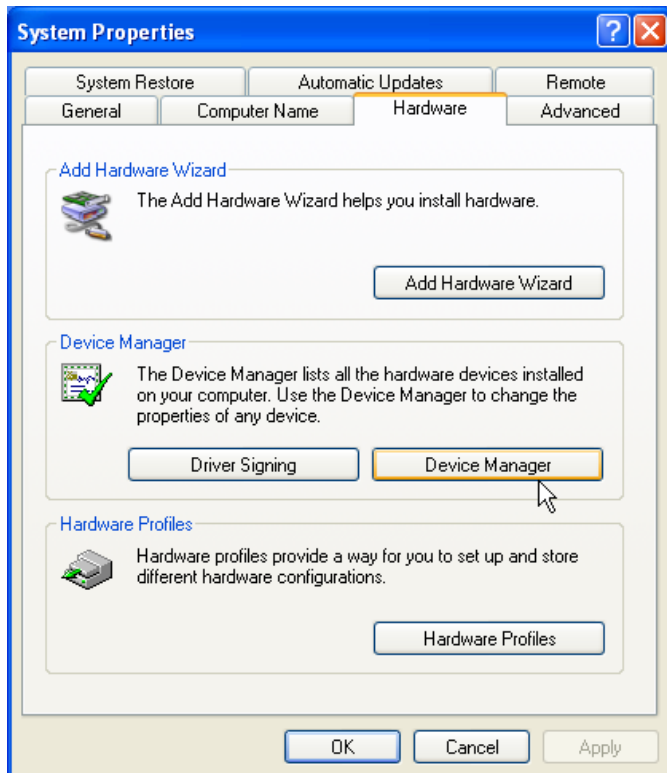

2) Right click on “KEW POWER METER 6300” in the “Universal Serial Bus controllers” and select.

3) Click “Uninstall” and delete the USB driver.

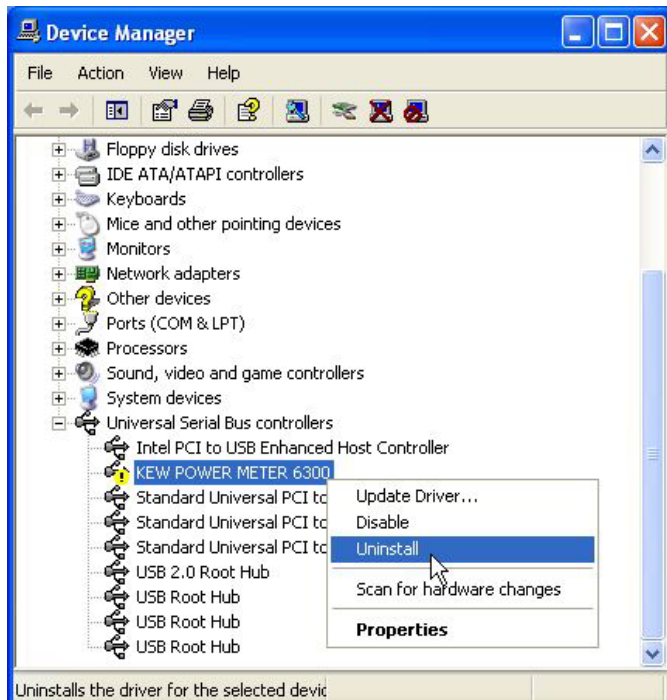

4) Disconnect the USB cable connected with a PC and Power Meter 6300.

5) Then reconnect the USB cable to Power Meter 6300.

6) When “Found New Hardware Wizard” window appears, please refer to the instruction manual (Section 10-2. Install (USB driver)) and install the USB driver.