

LOGGER KEW 5020



3 channel Data Logger for multiple parameter recording

Advanced KEW Logger



- Load/Leakage Current recording and Power Quality analysis.
 (Power Quality: Reference voltage, Swell, Dip, Short power Interruptions)
- The recorded data is downloadable onto a PC via USB cable.
- Variation of the measured voltage and current data can be confirmed simultaneously on the PC display monitor.
- LED flickers when the preset current / voltage value is exceeded.
 (Available for Trigger / Capture Recording, Power Quality Analysis modes)
- Supplied with the user friendly software "KEW LOG Soft2".
 This permits editing, analysis and graphical display of data.

- Simplifi ed Power Integration.
 (The "KEW LOG Soft2" uses current and voltage recorded to calculate the integral power consumption)
- Various measurements are available with 4 recording modes: Normal, Trigger, Capture, Power Quality Analysis
- 60,000 data points can be recorded when using 1 channel.
- Continuous measuring time: Approx.10days(AlkalineBattery)
- Lowpass Filter will filter out the in higher frequency harmonics.

3 channel inputs for the simultaneous recording of Leakage Current, Load Current and Voltage The logger can be fixed to a metal distribution board via

Large capacity for storing 60,000 data points

60,000 data points can be recorded when 1ch is used, and when all the three channels are used, 20,000 data points per channel can be recorded.

Max. number of recorded data

Using all 3 channels	Using 2 channels	Using only 1 channel
20,000 data	40,000 data	60,000 data

B 4		1:	
max.	record	iina c	luration

Recording interval	Using all 3 channels	Using 2 channels	Using only 1 channel
1 sec.	5:33:20	8:20:00	16:40:00
2 sec.	11:06:40	16:40:00	1 day / 9:20:00
5 sec.	1 day / 3:46:40	1 day / 17:40:00	1 day / 11:20:00
10 sec.	2 days / 7:33:20	3 days / 11:20:00	6 days / 22:40:00
15 sec.	3 days / 11:20:00	5 days / 5:00:00	10 days / 10:00:00
20 sec.	4 days / 15:06:40	6 days / 22:40:00	13 days / 21:20:00
30 sec.	6 days / 22:40:00	10 days / 10:00:00	20 days / 20:00:00
1 min.	13 days / 21:20:00	20 days / 20:00:00	41 days / 16:00:00
2 min.	27 days / 18:40:00	41 days / 16:00:00	83 days / 8:00:00
5 min.	69 days / 10:40:00	104 days / 4:00:00	208 days / 8:00:00
10 min.	138 days / 21:20:00	208 days / 8:00:00	416 days / 16:00:00
15 min.	208 days / 8:00:00	260 days / 10:00:00	520 days / 0:00:00
20 min.	277 days / 18:40:00	416 days / 16:00:00	833 days / 8:00:00
30 min.	416 days / 16:00:00	625 days / 0:00:00	1250 days / 0:00:00
60 min.	833 days / 8:00:00	1250 days / 8:00:00	2500 days / 0:00:00

^{*}Max recording time is dependent on battery life (approx 10-days with Alkaline battery) Use of optional AC Adopter is recommended for long time recording.

The logger can take external DC input via an AC/DC adaptor (Model 8320), ideal for long recording times.



the magnet on it's rear side



when the preset current/voltage is exceeded

Various measurements are available with 4 recording modes



Normal recording mode

For monitoring power line status or an intermittent leakage.



Trigger recording mode

For observing an irregular operation of an ELCB/RCD, an irregular current / voltage.



Capture recording mode

For observing waveforms easily.



Power Quality Analysis Mode

For monitoring and observing voltage fluctuations.

Non Volatile Memory

Recorded data will be retained even if the batteries are exhausted or replaced due to the presence of a nonvolatile memory

Battery power indicator

Indicates battery voltage in 4-levels.

(It is possible to use the logger for a further approx 24 hours even after the warning symbol is fl ashing.)







Voltage sensor with a built-indifferential amplifier (KEW 8309: option) can measure the floating voltage (=phase to phase voltage ungrounded)

The clamp sensor and/or voltage sensors can be connected to any of the 3 channels

 $^{\star}\,\mbox{The logger unit automatically identifies the sensors connected.}$

Recorded data can be directly transferred to PC via USB cable



The user friendly PC software "KEW LOG Soft2" is supplied



* Please download the software from our website.



Selection of One-time mode or Endless mode

One-time on: →

Recording will stop when memory is used up.

site and comments

One-time off: **(** Overwrite the old data, and store the latest data.




The Lowpass Filter can detect the harmonics

(Cutoff Frequency = Approx. 160Hz)




CALL: Confirmation of recorded data

- The following can be displayed: number of recorded data points, (max+ min+ peak) value for each channel complete with time/date information in the Normal recording mode. (Detected values (i.e. when values are outside preset limits) can be displayed in other recording modes)
- RECALL: The last 10 recorded data points including time/ date can be recalled on the logger display.

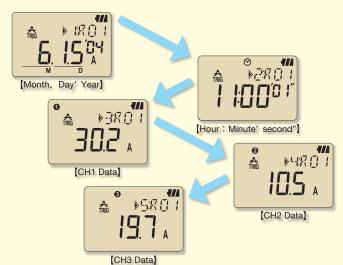

Variations of the measured voltage and current data can be displayed instantaneously on a PC display monitor



Simplified Power Integration

(The "KEW LOG Soft2" uses current and voltage recorded to calculate the integral power consumption.)




4 recording modes make various measurements possible



Normal recording mode

For monitoring power line status or an intermittent leakage.

 Records the variation of the current / voltage in a given interval (For monitoring the variation of the current / voltage against time.)



- A choice of 15 recording intervals are available: 1 sec. to 60 min. (1,2,5,10,15,20,30 sec, 1,2,5,10,15,20,30,60 min.)
- The average of the measured value in every recording interval is recorded. The Max., Min. and Peak values (sampled crest value converted to sine RMS value) are recorded every 10 readings.



Capture recording mode

For observing waveforms easily.

- Waveform display via a PC by sampling the inputs every 0.55ms.
- When the preset current / voltage value is exceeded, instantaneous values are recorded for 200ms (from 10(50Hz) to 12 (60Hz) waveforms) before and after preset value is exceeded.
- LED flickers when the measured values exceed the preset current / voltage value.



Trigger recording mode

For observing an irregular operation of an ELCB/RCD, an irregular current / voltage.

 Detects the value, time and frequency of the current / voltage when the preset value is exceeded.




- When the detection level (i.e. preset value) is exceed-
- ed, 8 data points (True RMS values for approx. 0.8 sec) and peak value are recorded before and after the preset value is exceeded.
- Inrush current or an abnormal current / voltage can be detected by sampling the inputs at every 1.6ms.
- LED flickers when the measured values exceed the preset current / voltage value.



Power Quality Analysis Mode

For monitoring and observing voltage fluctuations.

 Detects the reference voltage, Swell, Dip and Short Interruption. Records the values detected with the start time and end time.



- Samples the inputs every
 0.55ms and detects the voltage fluctuation every 10ms.
- LED flickers when the voltage fluctuation is detected.



Application Notes and Useful Tips for KEW 5020

Insulation Level Monitoring by checking the leakage current

- Detect an intermittent leakage current as often this is unpredictable.
- Check for nuisance tripping of an RCD/ELCB due to a leakage current. Check also if RCD is tripping at its rated tripping current.
- Check for the presence of harmonics. Use 2 clamp sensors (one per channel) on same line and use the filter function on one clamp sensor. A difference in values between the 2 channels will indicate the presence of harmonics. In this way the source generating harmonics can be traced.

Monitoring the load current

- Confirm the stability of a load (eg. motor) and the distortion it causes to the current by detecting accurately the over load caused for example by an inrush (starting) current and a surge current.
- Check for phase imbalance (in a 3 phase system)
- Rate switchgear appropriately by measuring the peak current and the inrush current.

 Analyze voltage drop due to starting current and thus compensate accordingly.

Monitoring voltage fluctuation (Power quality analysis)

- Measure/ record the reference voltage, swell, dip, short interruption.
- Locate the source of voltage drop caused by the operation of large motors in industrial applications.
 - Eg. In the event of a voltage drop at the load side:
 - If current remains stable, then the source will be upstream with respect to the load.
 - 2. If the current increases, then the source will be down stream with respect to the load.
- Check out on machine (eg. welding robot, heavy mechanical electric machine) downtime/stoppages caused by abnormal voltage fluctuations.

Monitoring overall electrical power of production line at factories or each floor at buildings

Analyzing and processing the recorded data with a PC

The user friendly PC software "KEW LOG Soft2" is supplied.

* Please download the software from our website.




Easy to set up with a PC




(Normal and Trigger recording modes can be set up through the logger itself.)

Large data can be easily processed

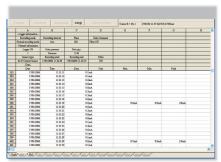


- The type of the sensor connected to the logger will be automatically recognized.
- Just click appropriate dialog boxes for set up if it is not required to input any comments.
- By using commercially available USB hub, multiple loggers can be connected to a PC and can set the synchronized time.

A graph can be made by just one click

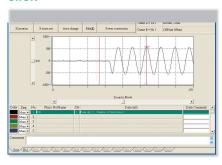

Display of Power Quality

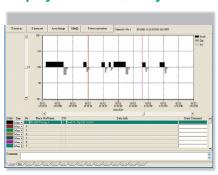


Capable of registering the names of 1,000 sites




Simplified Power Integration

1. Data collection under Normal Recording mode

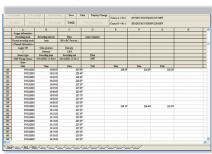

2. Click the "Simplified Power Integration".

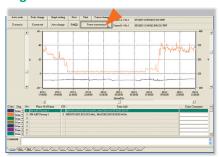

Advanced!

 The PC software "KEW LOG Soft2" provides easy calculation of integral power consumption.

KEW LOG Soft 2


(Single-phase 2-wire, Single-phase 3-wire, Three-phase 3-wire, Three-phase 4-wire)

*Simplifi ed power integration function is available for the data recorded under Normal Recording mode.

3. Check the wiring system and input the power factor



4. Integral power consumption will be displayed in a graph

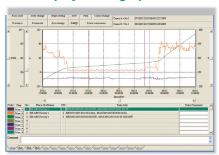

5. The values of integral power consumption will be automatically input in the data spreadsheet

					Ouser A = No 1	07120023000040			
			ngy Idag)		Ounce 5 = No 1	00120506190008	7) 230.6007		
	A	B	c	D	1	P	0	×	\equiv
	-Lagger information-								
	Farmeling mode	Facceding interval	Plee	Data Comment					
	Forme convenies mode	Inis.	000 ABC Partory 1						
	-Chazal inforation-								
	Logger CH	Data persence	Delugty:	Water	Voltage	Cusest	Power Partor		
	Dategrated power	Passes	1304	19297	No.1	No.2	1.00		
	Swance type	Structing vt	Faccoding start	Recording and	Fiber				
			031200051550.65	00/12/0005 13:34:15	099				
	-Date-								
	Dele	Time	Electate Power	Unit	Integrated power quantity	Unit			
405	60420005	29.45.03			28.300				
406	00020005	23.06.03			28.312				
407	00020005	23.07.03			29.32				
401	60120005	23.00:03			28.330				
407	000,20000	23:09:03			2634				
440	00120005	22:10:33			29.350				
461	00120005	20:11:03			28.36				
4Q	6012000	29:12:88			26.374				
40	00120005	20:13:03			20.384				
444	00020005	22 14 23			29.395				
40	00120005	29.15.03			28.400				
446	070.20005	22:16:93			29.404				
447	070.20005	20:17:03			20.400				
461	00120005	29.18.88			28.494				
40	00020000	20:19:03			28.40				
400	010120000	20:20:03			28.400				
451	00120005	29.21.03			28.46				
402	60420805	29.22.83			28.479				
453	00120005	20.20.03			29.40				
454	00020005	22,2432	923		20.50				- 8

^{*}Input any power factor

Optional Accessories


Voltage Sensor


KEW 8309

Floating voltage can be measured

*Floating voltage: phase to phase voltage not grounded



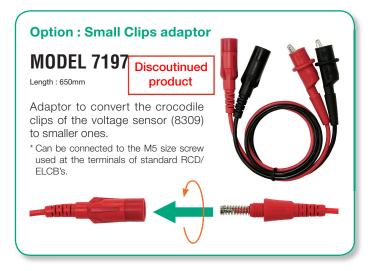

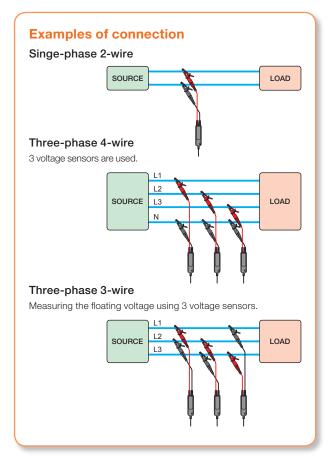

Max. input voltage	600Vrms(sin) AC, 848.4V Peak		
Input system	Differential input (can measure floating voltage)		
Output voltage	0 to 60mV AC (output/input : 0.1mV/V)		
Measuring ranges	6 to 600V		
Accuracy (Frequency range)	±1.0%rdg ±0.1mV(50/60Hz)		
Operating Temperature and	-10 to 50°C ,relative humidity 85% or less (no condensation)		
Humidity Ranges			
Input impedance	Approx.3.4MΩ		
Output impedance	Approx.180Ω		
Location for use	Altitude up to 2000m, Indoors		
Applicable standards	IEC 61010-1 CAT Ⅲ 600V pollution degree 2		
	IEC 61010-031		
	IEC 61326(EMC)		
Withstand Voltage	5350V (rms 50/60Hz) for 5 sec.,		
	between measuring terminal and enclosure.		
Dimension	87(L)×26(W)×17(D)mm (excluding protrusions),		
Weight	Approx.135g		
Total length	Approx.2m		
Output connector	MINI DIN 6PIN		
Accessories	Instruction manual		
Optional accessories	7185 (Extension cord)		

Hard Carry Case

MODEL 9119

Discoutinued product

Dimensions: 327 (L) \times 310 (W) \times 120 (D) mm



Up to 3 sensors can be packed into the hard carry case. All the clamp sensors can fit in the case except for the KEW 8123 clamp sensor.

Combinations available

	The Available Numb		mbers	6		
Logger	1		ı			
Clamp Sensor(ϕ 68)	1			-		
Clamp Sensor(ϕ 40)	2	1	-	3	2	1
Clamp Sensor(φ24)	-	1	2	-	1	2

* Any clamp sensor (1 pc.) can be exchanged with the voltage sensor (1 pc.).





AC adapter (External Power Supply)

MODEL 8320

- Appropriate for a longer period of recording.
- Complies to 90 to 264V(45 to 66Hz).



Carrying case

MODEL 9135

Dimension : 250 (L)×270 (W)×216 (D)mm



Clamp Sensor Series


Leakage current & Load current detection types



Load current detection types



Optional accessories

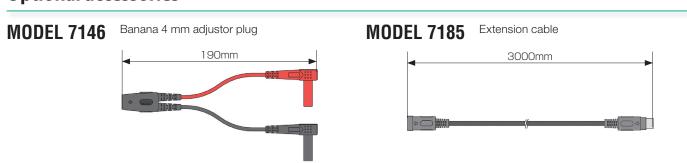

Specifications

Normal Recording Mode (AC 50/60Hz, Sine wave, Input: 10% or more of the range at CH1)

Range	RMS Accuracy
100.0mA	±2.0%rdg±0.9%f.s. + Accuracy of Sensor
Other ranges	±1.5%rdg±0.7%f.s. + Accuracy of Sensor
Crest Factor	2.5 or less :RMS accuracy(sine) + 2.0%rdg+1.0%f.s.

^{*}Max, Min and Instant Peak values in Normal Recording mode are just reference values; their accuracies aren't guaranteed.

Trigger Recording Mode (AC 50/60Hz sine wave)

Range	Accuracy
100.0mA	±3.5%rdg±2.2%f.s. + Accuracy of Sensor
Other ranges	±3.0%rdg±2.0%f.s. + Accuracy of Sensor

Capture/ Power Quality Analysis Recording Mode

Range	Accuracy
100.0mA	±3.0%rdg±1.7%f.s. + Accuracy of Sensor
Other ranges	±2.5%rdg±1.5%f.s. + Accuracy of Sensor

	KEW 5020			
Recording Mode	Normal, Triger, Capture, Power Quality Analysis			
Operating system	Successive Approximation (CH1 single synchronized sampling)			
Rated max. working voltage		9.9Vrms AC, 14V peak value		
Number of input channel		3ch		
Measuring method		True RMS		
RMS measuring interval		Approx. 100ms.		
Sampling interval	Normal / Trigger mode	Approx. 1.65ms/CH		
	Capture mode	Approx. 0.55ms (waveform: at every 1.1ms)		
	P.Q.A mode	Approx. 0.55ms		
Low battery warning		Battery mark display (in 4 levels)		
Over-range indication	"(DL" mark is displayed when exceeding the measuring range		
Auto power off	Turns off the instrument automatically if there is no switch operation for about 3 min. (This function doesn't work during a recording.)			
Location for use	Indoor use, Altitude up to 2000m			
Operating temperature	-10 to 50°C, relative humidity 85% or less (no condensation)			
and humidity range				
Battery	LR6(AA)(1.5V)×4 / External supply 9V DC (Special AC Adapter)			
Possible measurement time	Approx.10days (with alkaline LR6 batteries)			
Applicable standards	IEC 61010-1 CAT III 300V Pollution degree2			
		IEC 61326 (EMC)		
Withstand voltage		3470V AC(RMS 50/60Hz) / for 5sec.		
Dimension		111(L)×60(W)×42(D)mm		
Weight		Approx.265g		
Accessories		9118 (Carrying case)		
		7148 (USB cable)		
	Instr	uction manual Quick manual Batteries USB Notice sheet		
Optional accessories		8146/8147/8148 (Leakage & Load current clamp sensor)		
	8121/	/8122/8123/8124/8125/8126/8127/8128 (Load current sensor)		
		8130/8135 (Flexible clamp sensor)		
	8309 (Voltage se	ensor) 8320 (AC adapter) 9135 (Carrying case) 7185 (Extension cable)		



Safety WarningsPlease read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquiries or orders :



2-5-20, Nakane, Meguro-ku, Tokyo, 152-0031 Japan Phone:+81-3-3723-0131

Fax:+81-3-3723-0152

www.kew-ltd.co.jp