



Quality and reliability is our tradition

KYORITSU

EARTH RESISTANCE & RESISTIVITY TESTER

KEW 4106

Earth Resistance Measurements with 4, 3 and 2 Wires
Earth Resistivity (ρ) Measurement using WENNER method

- High test current up to 80mA yielding resolution of 0.001 on 2Ω range
- Advanced Filtering method (based on FFT Fast Fourier Transform) reduces noise interference for obtaining stable measurements.
- Automatic and Manual selection of the Test Current Frequency in four bands (94/105/111/128Hz). In Automatic mode, KEW 4106 will select the most suitable Frequency.
- Several sub-results can be shown on the display: Resistance of the Auxiliary Earth Spikes, Frequency of Test Current, Voltage and Frequency of Interference (noise), Residual Resistance R_k , etc.
- Warning for excessive noise and high Auxiliary Earth Spikes resistance.
- Large Graphic Display with backlight for readings in poorly illuminated areas.
- Up to 800 measurement results can be saved in the memory and recalled on the display.
- The stored results can be transferred to a PC by using USB adapter (MODEL 8212-USB) and the special software "KEW Report".
- Robust design with IP54 protection.

KYORITSU ELECTRICAL INSTRUMENTS WORKS, LTD.

www.kew-ltd.co.jp




Earth Resistance Measurement

- Earth resistance measurement with 4, 3 and 2 wires and six ranges covering measurements from 0.03Ω to $200k\Omega$.
- Also ideal for large earthing systems by the considerable test current of $80mA(max.)$ yielding a high resolution of 0.001 on 2Ω range.




- Advanced Filtering method (based on "FFT" Fast Fourier Transform) reduces noise interference for obtaining stable measurements.
- Warnings for excessive noise and high Auxiliary Earth Spikes resistance.

Earth Resistance Measurements with 4, 3 and 2 Wires

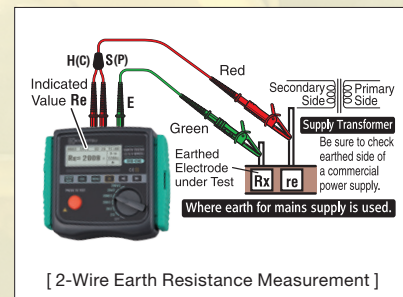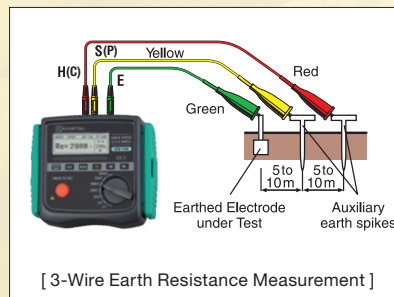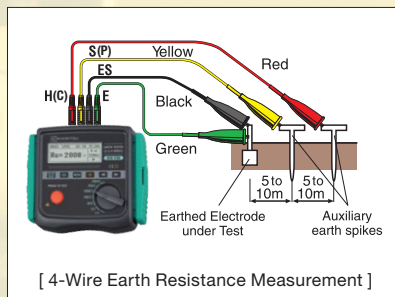

Earth Resistance Measurement Display

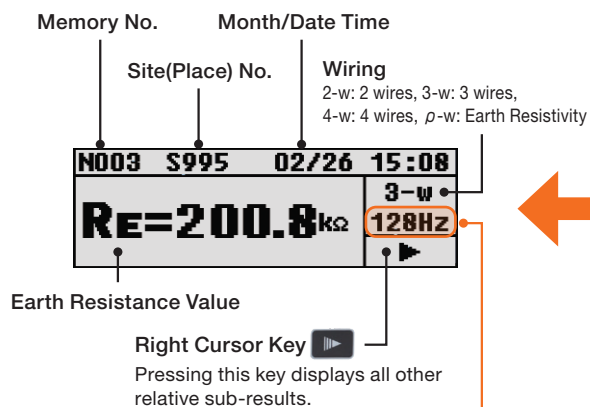


Automatic and Manual selection of the Test Current Frequency:

AUTO/94/105/111/128Hz

This is to minimize the noise influence of the earth voltage.

Series Interference Voltage (Earth Voltage) Measurement

Fst: Frequencies of the Earth Voltage between E-S terminals
Ust: Voltages of the Earth Voltage between E-S terminals

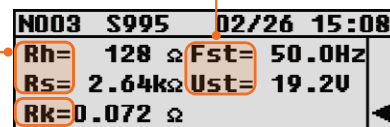

Null Facility


The residual test lead resistance (Rk) is stored and is deducted from the measured result. This is to ensure more accurate low Earth Resistance measurements.

Auxiliary Earth Spikes Measurement

Rh: Resistance of Auxiliary Earth Spike H(C)
Rs: Resistance of Auxiliary Earth Spike S(P)

Principle of Earth Resistance Measurements

This instrument makes earth resistance measurements with fall-of-potential method, which is a method to obtain earth resistance value "Rx" by applying AC constant current "I" between the measurement object "E" (earth electrode) and "H(C)" (current electrode), and finding out the potential difference "V" between "E" (earth electrode) and "S(P)" (potential electrode).

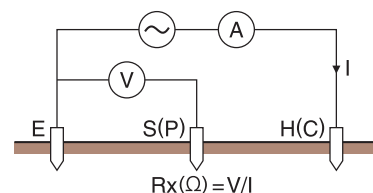

Earth Resistivity Measurement

- The earth resistivity measurement is useful for soil surveys to establish the optimum earth electrode system design and site, to avoid extra cost of re-working electrode installations. It can be also suitable for geological investigations.
- Earth resistivity measurement is automatically calculated after having set the distance between Auxiliary Earth Spikes (Wenner method).




Measurement Method for Earth Resistivity (ρ)



[Connection of Auxiliary Earth Spikes and Test Leads]

Stick the four Auxiliary Earth Spikes into the ground deeply. They should be aligned at an interval of 1 to 30m(a). The depth should be 5% or less of the interval between the spikes.

Note) The supplied Test Leads can be used for the distance between the spikes up to 20m.

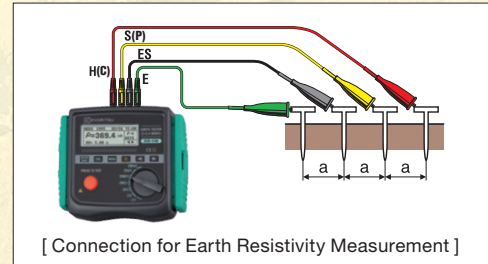

Earth Resistivity (ρ) Measurement Display

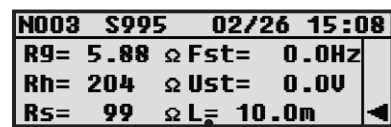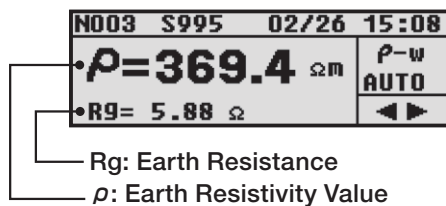


Principle of Earth Resistivity (ρ) Measurements

According to the Wenner 4-pole method, apply AC current "I" between the "E" (earth electrode) and "H(C)" (current electrode) to find out the potential difference "V" between the two potential electrodes "S(P)" and "ES".

To obtain the earth resistance "Rg (Ω)", divide the potential difference "V" by AC current "I"; where the distance between electrodes is "a" (m).

Then use the formula: $\rho = 2 \cdot \pi \cdot a \cdot Rg (\Omega \cdot m)$.

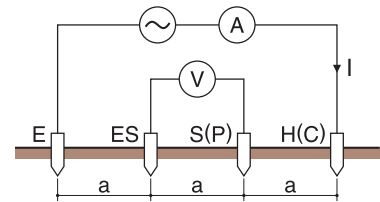

Software (KEW Report)

The stored results can be transferred to a PC via USB adapter (MODEL 8212-USB).

- Up to 800 measurement results can be saved in memory.
- Data can be converted to CSV files.



Please download the software from our website.



Data No	Site No	Date Time	Function	Parameters	Results	Comments
1	000	5/14/2008 12:22:40	250V RANGE	Source	Rg = 5.88 Ω	
2	000	5/16/2008 13:52:31	250V RANGE	Source	Rg = 5.88 Ω	
3	000	5/16/2008 13:52:33	250V RANGE	Source	Rg = 5.88 Ω	
4	000	5/16/2008 13:52:33	250V RANGE	Source	Rg = 5.88 Ω	
5	000	5/16/2008 13:52:37	250V RANGE	Source	Rg = 5.88 Ω	
6	000	5/16/2008 13:52:39	250V RANGE	Source	Rg = 5.88 Ω	
7	000	5/16/2008 13:52:41	250V RANGE	Source	Rg = 5.88 Ω	
8	000	5/16/2008 13:52:49	250V RANGE	Source	Rg = 5.88 Ω	

[List of data]

KEW 4106 Specification

Function	Range	Resolution	Measuring range	Accuracy
Earth resistance Re (Rg at ρ measurement)	2 Ω	0.001 Ω	0.03 to 2.099 Ω	$\pm 2\%rdg \pm 0.03\Omega$
	20 Ω	0.01 Ω	0.03 to 20.99 Ω	$\pm 2\%rdg \pm 5dgt^{*1}$
	200 Ω	0.1 Ω	0.3 to 209.9 Ω	
	2000 Ω	1 Ω	3 to 2099 Ω	
	20k Ω	10 Ω	0.03 to 20.99k Ω	
	200k Ω	100 Ω	0.3 to 209.9k Ω	
Auxiliary earth resistance Rh, Rs				8% of Re+Rh+Rs
Earth resistivity ρ	2 Ω	0.1 to 1 $\Omega \cdot m$ Auto-ranging	0.2 to 395.6 $\Omega \cdot m$	$\rho = 2 \times \pi \times a \times Rg^{-2}$
	20 Ω		0.2 to 3956 $\Omega \cdot m$	
	200 Ω		20 to 39.56k $\Omega \cdot m$	
	2000 Ω		0.2 to 395.6k $\Omega \cdot m$	
	20k Ω		2.0 to 1999k $\Omega \cdot m$	
	200k Ω			
Series interference voltage Ust (A.C only) ^{*3}	50V	0.1V	0 to 50.9Vrms	$\pm 2\%rdg \pm 2dgt$ (50/60Hz) $\pm 3\%rdg \pm 2dgt$ (40 to 500Hz)
Frequency Fst	Auto-ranging	0.1Hz 1Hz	40 to 499.9Hz	$\pm 1\%rdg \pm 2dgt$
Measuring method	Earth resistance: Fall-of-potential method (currents and voltages measured via the Probes) Measurement method of Earth Resistivity (ρ): Wenner 4-pole method Series interference voltage (earth voltage): RMS Rectifier (between the E-S Terminals)			
Memory capacity	800 data			
Communication interface	USB			
LCD	Dot-matrix 192 \times 64, monochrome			
Over-range Indication	"OL"			
Overload Protection	between E-S(P) and between E-H(C) terminals 280V AC / 10 sec.			
Withstand voltage	between the electrical circuit and enclosure 3540V AC(50/60Hz) / 5 sec.			
Applicable standards	IEC 61010-1 CAT IV 150V / CAT III 300V Pollution degree 2 IEC 61010-031, IEC 61557-1,5, IEC 61326-1(EMC), IEC 60529(IP54)			
Power source	12V DC : sizeAA manganese dry battery (R6) x 8 (Auto power off: Approx. 5 minutes)			
Dimension	167(L) \times 185(W) \times 89(D)mm			
Weight	Approx. 900g (including batteries)			
Accessories	7229A(Earth resistance test leads), 7238A(Simplified measurement test leads) 8032(Auxiliary earth spikes [2spikes/1set]) \times 2, 8200-04(Cord reel[4pcs]) 8212-USB(USB adapter), 8923(Fuse[0.5A/600V]) \times 1(included),1(spares), 9121(Shoulder strap), 9125(Carrying case) Batteries, Instruction manual			

*1: Auxiliary earth resistance is 100 Ω with Rk correction.

*2: Depending on the measured Rg. Interval [a] between auxiliary earth spikes is 1.0 to 30.0m.

*3: This instrument is NOT designed to measure line voltages on commercial powers.

EVERYTHING YOU NEED.....

KEW 4106 comes with everything you need for testing the Earth Resistance and Soil Resistivity.

A full set of accessories is included: four auxiliary spikes, four cable reels and four test leads(Red:40m, Yellow/Black/Green:20m) for Earth and Resistivity measurements. It is also supplied with particular test leads with relative probes and alligator clips dedicated for simplified measurements. PC software for downloading and interpreting of data and an interface cable are included.

The instrument also comes in a soft carry case, a quick reference guide is attached to the case lid, and it is supplied with a calibration certificate.



Safety Warnings :

Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquiries or orders :



**KYORITSU ELECTRICAL
INSTRUMENTS
WORKS, LTD.**

2-5-20, Nakane, Meguro-ku, Tokyo, 152-0031 Japan

Phone: +81-3-3723-0131

Fax: +81-3-3723-0152

www.kew-ltd.co.jp

