

POWER QUALITY ANALYZER KEW 6315



Simultaneous Power & Power quality measurements

Power/ Harmonics/ Waveform/ Power quality are recorded at all CHs. (Voltage: 3ch, Current 4ch)

Helpful support functions
 Quick Start Guide, Wiring check and Sensor detection for easy and reliable measurement

IEC 61000-4-30 Class S and the European Standard EN 50160

- Remote monitoring on PC and Android[™] device
 Remote checking of measurement in real-time is possible via Bluetooth[®] communication. Recorded data can be saved in the supplied SD card.

 EN 50160 report can be generated after measurment by PC software.
- Various Clamp Current Sensors
 Various types of clamp and flexible sensors are available: from 1000mA range up to 3000A range and Earth leakage measurements
- Energy consumption check on site
 Trend and demand graphs for easy recognition.
- TFT color display with high resolution
- IEC 61010-1 CAT № 300V / CAT 🏻 600V / CAT 🗘 1000V


Simultaneous recording of all power and power quality with easy operation



Quick Start Guide

Easily and securely starts recording

One-Touch START/STOP Key for Quick Start Guide providing easy setup guides.

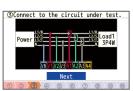



⊚Select a de	sirable recor	ding interval.		
1sec.	1min.	1hour		
2sec.	2min.	2hours		
5sec.	5min.			
10sec.	10min.			
15sec.	15min.			
20sec.	20min.			
30sec.	30min.	150/180Cycle		
0 2 3 4 5 6 7 8 9 9				



Guide start

①Select desirable recording item All (Power + Quality + Harmonics)

Power + Quality

Power + Harmonics

Connect to the circuit

Wring check

Select interval

Set recording time


Start recording

Power & Energy

Instantaneous value

		1ch	2ch	3ch		
٧	:	239.9	246.3	236.6	٧	
A	:	48.1	48.3	47.9	Α	
	:	11.5	11.9	11.5	kW	
Q	:	1.2	1.0	0.9	kvar	
S	:	11.6	11.8	11.4	kVA	
PF	:	0.812	0.809	0.792		Inst
	:	44.8	kw f:	60.01	Hz	Avq
Q	:	4.5	kvar			Max
S	:	44.8	kVA			
PF	:	0.788	An:	4974	mA	Min
DC1	:	0	m// DC2:	0	mV	00:38 /1min


V1 INST	P INST
242.3 v	44.8kw
V2 INST	S INST
246.6 v	44.7 kV
V3 INST	Q INST
236.8 v	4.2kv
f INST	PF INST
59.99 нz	792

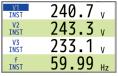

List

Zoom(8-split)

Zoom(4-split)

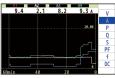




Trend

- Measures instantaneous / average / min / max for voltage, current, active / reactive / apparent power, $\cos \theta$ and line frequency all on one screen.
- The recording time for these parameters can be set from 1 second up to 2 hours in several steps.
- Trend of all main parameters and customized Zoom functions.
- Function to define size of capacitor banks of PF correction unit.

Integration value

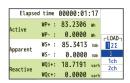


- The display will list the active / reactive / apparent energy in total and for each phase consumed (or generated in case of co-generation like solar panels, etc).
- The elapsed time is also shown on the same display screen.

Demand

Time left	00:29:28		
DEM Target	4.000	kW	
DEM Guess	3.918	kW	Meas.
DEM Present	0.069	kW	
DEM Max	0.069	kW	
	2013/10/24 18:30:32		



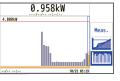


Measurement


Change in specific period


Demand change

To support demand control, present energy usage and estimated value are displayed on a graph while recording max demand value and the occurred time.

Vector and Wiring check

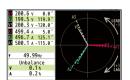

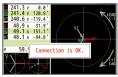

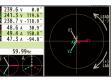

Vector

Wiring check

Ideal vector

- Can display voltage and current by vector per CH and also unbalance ratio.
- Wiring check function confirms connection and displays ideal vector (at the lower left corner) according to the selected wiring system, and shows connection errors

Print Screen SCREEN

This function takes a color photo of the display screen and saves it as BMP file. Useful for report creation.



Power Quality

Event


All	All events		Occurrence		
	01.0	٧	2013/07/18	10:45:43.136	
	50.4		2013/07/18	10:45:43.136	
 	87.1	٧	2013/07/18	10:45:35.136	
2 1	28.5	٧	2013/07/18	10:45:27.136	
- 2	17.1	٧	2013/07/18	10:45:27.136	
😽	50.4	٧	2013/07/18	10:45:18.136	
	87.1			10:45:10.136	
P 1	28.5	٧	2013/07/18	10:45:02.136	

Measures voltage swells / dips / interruptions / transients and inrush currents that may indicate a weak power distribution system. Such phenomena may damage or reset devices. KEW 6315 can catch swells / dips / interruptions and inrush currents based on half cycle (10 ms @ 50Hz or 8.3ms @ 60Hz) True RMS. All necessary data is displayed by pressing one key.

Swell

Swell is an instantaneous voltage increase, most of the time

originated by upstream power line failure or switching OFF large load or switching ON large capacitor.

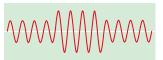

POWER QUALITY ANALYZER K

Software "KEW Windows for KEW 6315" for data analysis and setting via USB port

- Automatic creation of graph and list from recorded data.
- Centralized management of setting and recorded data acquired from multiple devices.
- Data can be expressed in crude oil and CO₂ equivalent values in the report.

Please download the software from our website. ¾Windows[®] is a trademark or registered trademark of Microsoft Corporation.



	the / If rec			
100 001	400			
	100			
Color 100 c				
	10.			
196/m 1880 s				
	190			
CON 1,000.0				
	1000			
	SECTION AND DESCRIPTION			
	444			
	100			

Real-time and remote measurements.




Measurements can be graphically displayed on Android™ devices or PC in realtime via Bluetooth®







Waveform

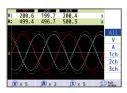

- Displays voltage and current on each Ch by waveform.
- Scales of voltage/current axis and time axis are selectable, and also full-scale function for automatic scaling is available.

USB Terminal

Digital Output Terminal

Open Collector Output (1ch)

2ch DC100mV / 1000mV, 10V. To record additional parameters (e.g. Lux, Temperature, Humidity, etc.)

Analog Input Terminal

Full

Graph

Harmonics Analysis

List

- Graphic display of harmonic components up to 50th order for voltage, current and power in total and for
- List display of harmonic content, RMS value and phase angle of each order.
- Can analyze harmonic currents that may contribute to damage capacitor banks for PF correction, overheating transformers / neutral conductors / cables, unwanted tripping of breakers.

SD card Interface

SD cards up to 2GB can be used

Possible recording time When the 2GB of SD is used

Interval	REC item				
interval	Power	+Harmonics	7		
1sec.	13days	3days			
1min.	1year or more	3months			
30min.	10year or more	7year or more			

Data of power quality events are not considered to estimate the possible recording time. The max possible time will be shortened by recording such events.

Dip, as the opposite of a swell, is an instantaneous voltage decrease, most of the time caused by switching ON large load e.g. motors or by downstream power line failure.

Interruption

Interruption is a power line cut-off from any source of supply. It can be caused by a fault in a power line, which causes switch gear to open.

Transients/Over Voltage (Impulse)

Transient is a very fast and momentary voltage increase that can seriously damage devices connected to a power line. It may be caused by electrical switching events such as unstable contacts of relays, tripping of breakers but also by lightening. KEW 6315 can catch Transients from 24 us.


Inrush Current

Inrush current is a surge current that happens when motors, large or low impedance loads are switched ON. Then the current will stabilize as soon as the load has reached normal working conditions.







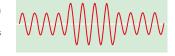


Flicker

Designed to meet IEC 61000-4-15

Flicker is a phenomenon giving an impression of unsteadiness of visual sensation induced by periodic voltage changes caused by fluctuating loads when using: arc furnace, spot welder, crane, excavator, etc.



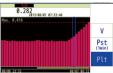

Trend graph

Displays Pst (1min.) on a trend graph.

Optional Accessories

Load current clamp sensors

MODEL 8128 MODEL 8127 MODEL 8126 MODEL 8125 MODEL 8124













Leakage & Load current clamp sensors

KEW 8146 KEW 8147 KEW 8148





Power supply adapter



Carrying case with magnet **MODEL 9132**



Load current flexible clamp sensors



Before connecting with the sensors KEW 8133 or KEW 8135, confirm that the internal firmware version is later than the one listed in the table below.

MODEL	Firmware version
KEW 8133	V1.50 or later
KEW 8135	V3.00 or later

The latest firmware is available on our website.

Distribution board door can be closed during measurement?


KEW 6315 facilitates safe testing thanks to its extreme compact design and with two attractive optional accessories: a carrying case with magnet (9132) for attaching it to the sides of metal enclosures and a power supply adapter (8312) which takes the power for the instrument from the supply being measured.

Specification

W	iring connections	1P2W, 1P3W, 3P3V	V, 3P4W			
М	easurements and	Voltage, Current, Frequency, Active power, Reactive power,				
parameters		Apparent power, Active energy, Reactive energy,				
		Apparent energy, Po	ower factor (cosθ), N	Neutral current,		
		Demand, Harmonics	s, Quality (Swell/Dip.	/Interruption,		
		Transients/Over volta	age, Inrush current,	Unbalance rate),		
		Capacitance calcula	tion for PF correction	n unit, Flicker		
Vo	oltage (RMS)					
	Range	600.0/1000V				
		600.0V Range : (sine	e wave 40 to 70Hz)			
	Accuracy	10% to 150% against 100V or more of nominal V: Nominal V±0.5%				
	riodardoy	Out of above range: ±0.2%rdg±0.2%f.s.				
		1000V Range: ±0.2%rdg±0.2%f.s.(sine wave 40 to 70Hz)				
	Allowable input	1 to 120% of each range (rms). 200% of each range (peak)				
Display range		0.15 to 130% of each range				
	Crest factor	3 or less				
	Sampling speed of	24µs				
Voltage transient		2-100				
Cı	urrent (RMS)					
	Range	8128	(50A type)	5000mA/50.00A/AUTO		
		8127	(100A type)	10.00/100.0A/AUTO		
		8126	(200A type)	20.00/200.0A/AUTO		
		8125	(500A type)	50.00/500.0A/AUTO		
		8124	(1000A type)	100.0/1000A/AUTO		
		8146/8147/8148	(10A type)	1000mA/10.00A/AUTO		
		8130	(1000A type)	100.0/1000A/AUTO		
		8133	(3000A type)	300.0/3000A/AUTO		
		8135	(50A type)	5000mA/50.00A/AUTO		
	Accuracy	±0.2%rdg±0.2%f.s.	+accuracy of clamp	sensor (sine wave, 40 to 70Hz)		
	Allowable input	1 to 110% of each r	ange (rms). 200% o	f each range (peak)		
	Display range	0.15 to 130% of eac	h range			
	Crest factor	3 or less				

Active power			
Accuracy	±0.3%rdg±0.2%f.s. + accuracy of clamp sensor (power factor 1, sine wave, 40 to 70Hz)		
Influence of power factor	±1.0%rdg (reading at power factor 0.5 against power factor 1)		
Frequency meter range	40 to 70Hz		
Power source (AC Line)	100 to 240V / 45 to 65Hz / 7VA max		
Power source (DC battery)	Alkaline size AA battery LR6 or Ni-MH (HR15-51)×6 Battery life approx. 3 h (LR6, Backlight OFF)		
Internal memory	FLASH memory (4MB)		
PC card interface	SD card (2GB)		
Communication interface	USB, Bluetooth®5.0 ^{*1}		
Display	320×240(RGB)Pixel, 3.5inch color TFT display		
Display update period	1 sec.		
Temperature and humidity range	23±5°C, relative humidity 85% or less(no condensation)		
Operating temperature and humidity range	0 to 45°C. relative humidity 85% or less(no condensation)		
Storage temperature and humidity range	-20 to 60°C. relative humidity 85% or less(no condensation)		
Applicable standards	EC 61010-1		
Dimension / Weight	175 (L) × 120 (W) × 68 (D) mm / Approx. 900g		
Accessories	7741B (Voltage test lead set), 7170[Power cord[EU]) or 7240[Power cord[UI 7219 (USB cable),8326-02(SD card [2GB]), 9125 (Carrying case for KEW 6315, KEW 6315-01) 9135 (Carrying case for KEW 6315-03, KEW 6315-04, KEW 6315-05), Input terminal platex-6, Quick manual, Batteries		
Optional accessories	8124, 8125, 8126, 8127, 8128 (Load current clamp sensor), 8130, 8133, 8135/Flexible clamp sensor), 8146, 8147, 8148(Leakage and Load current clamp sensor), 8312 (Power supply adapter), 9132 (Carrying case with magnet)		

^{*1} Some countries regulate the compliance with their Radio Law of the products equipped with Bluetooth®. Please confirm it with your distributor before purchasing our products equipped with Bluetooth®. *Pleutooth® is a trademark or registered trademark of Bluetooth SIG, Inc. *Android™ is a trademarks or registered trademarks of Bluetooth SIG, Inc.

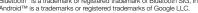



Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquiries or orders :



KYORITSU ELECTRICAL **INSTRUMENTS** WORKS, LTD.

2-5-20, Nakane, Meguro-ku, Tokyo, 152-0031 Japan Phone:+81-3-3723-0131 Fax:+81-3-3723-0152